

Instructions for Oven Cabinet

Tools Needed:

Phillips Head Screwdriver
Marking Tool
Level

Drill with 3/32" Bit
Tape Measure
Saw


Parts Included:

Oven Cabinet
Oven Supports
#8 x 3/4" Pan Head Screws
#6 x 1/2" Flat Head Screws

STEP 1


The oven cabinet you received is manufactured with a minimum opening size of 27"W x 24" High

By cutting the required dimensions out of the side rails, the width of the opening cabinet expanded to 31 1/2" wide.

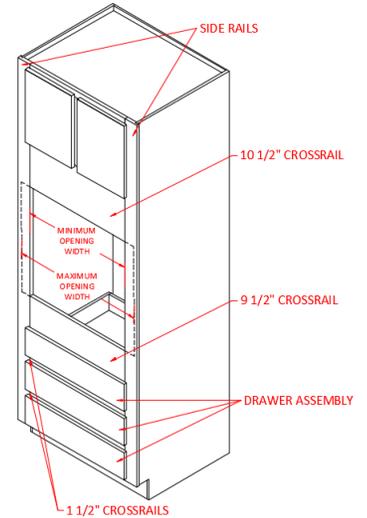


STEP 2

By cutting the required dimensions out of the top 10 1/2" crossrail and the bottom 9 1/2" crossrail, the opening height can be expanded to 41", leaving 1 1/2" crossrail on top and bottom of the opening.

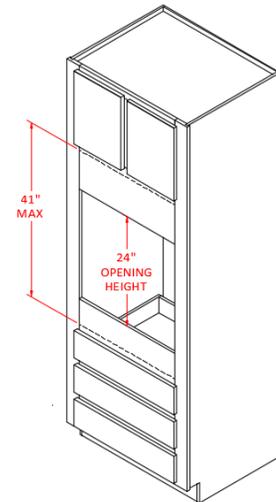


STEP 3

By removing the 9 1/2" crossrail and the top drawer assembly, the height of the opening can be further expanded to 47 1/2". Adjustments above the minimum, up to the maximum, are made by cutting the required dimensions out of the top 10 1/2" crossrail.

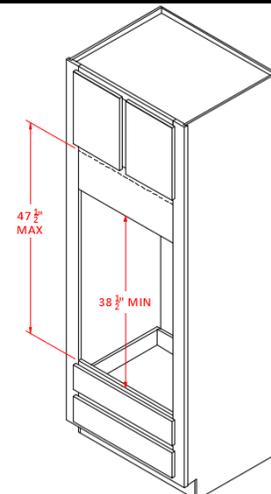


STEP 4

By removing the next 1 1/2" crossrail and drawer assembly, the opening height can be expanded to 54". Adjustments above the minimum, up to the maximum, are made by cutting the required dimensions out of the top 10 1/2" crossrail.

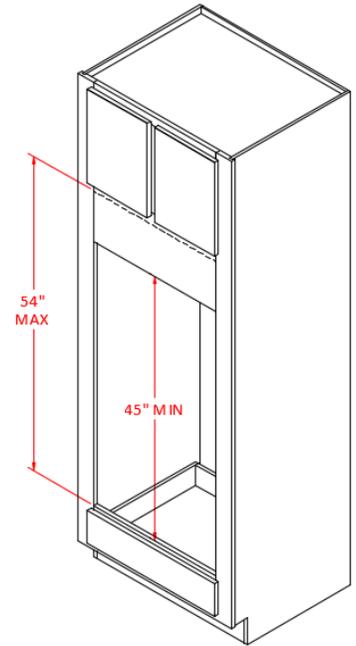

STEP 5

To obtain the maximum opening height of the cabinet, remove the next 1 1/2" crossrail and the last drawer assembly. This will allow a maximum opening height of 60". Adjustments above the minimum, up to the maximum, are made by cutting the required dimensions

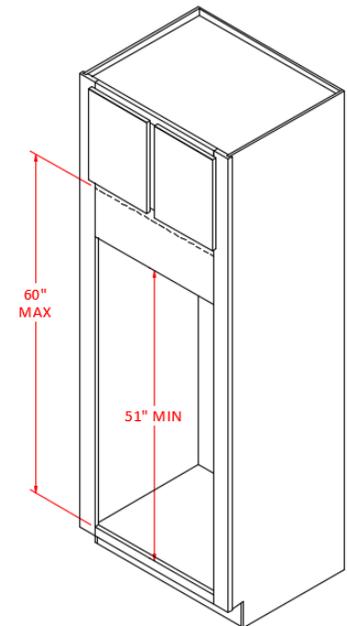


STEP 6

Once oven opening modifications have been made, the oven support rails can be installed

STEP 7

Once oven opening modifications have been made, the oven support rails can be installed to support the oven. The oven supports will be placed onto the lower opening crossrail, as shown in illustration. Check the bottom of the oven to be installed for leg/support locations. If oven utilizes legs/supports, place the oven supports onto oven cabinet rails to match this location.

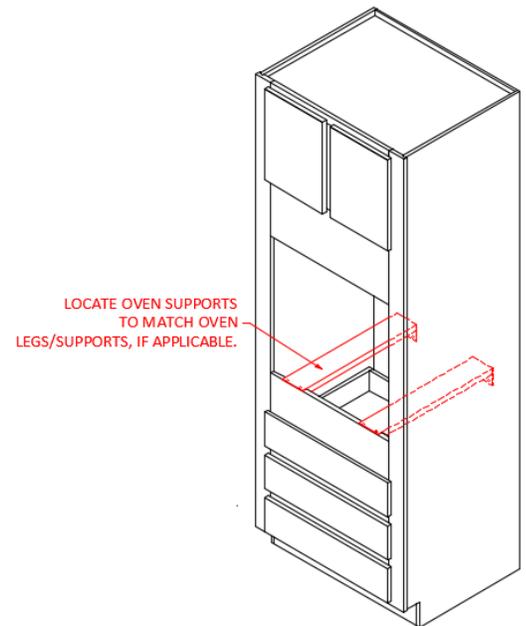


STEP 8

With the oven supports into place, mark the (2) hole locations per support onto the crossrail.

Remove oven supports from cabinet. Pre drill the (4) hole locations marked on the crossrail with 3/32" drill bit, 3/4" deep.

Attach the oven support rails to the oven cabinet with the supplied (4) #6 x 1/2" flat head

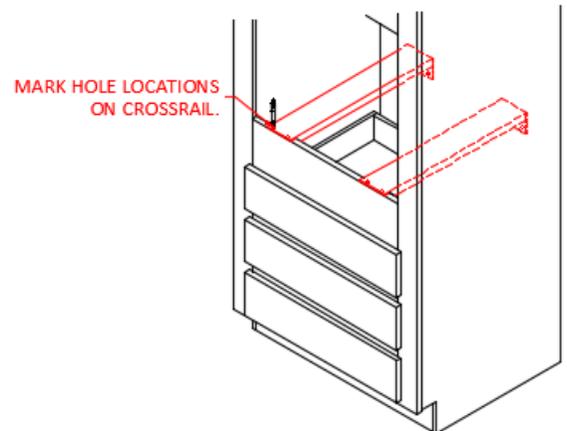

STEP 9

Once the oven supports are attached in the front to the oven cabinet, level the supports. Attach the leveled oven supports to the back panel with the supplied (4) #8 x 3/4" pan head screws per oven support.

The oven supports are now installed. Install the oven into the cabinet per oven manufacturer's instructions.

