Instructions for Base Sink Removable Units (BSR)

Parts Included:
BSR Cabinet

Tools Needed:
Phillips Head Screwdriver

STEP 1

BSR cabinets must be supported on both sides. This cabinet is not intended to be at the end of run or as a stand alone cabinet. Follow the Installation Instructions for Framed Cabinetry for base cabinet installation.

The BSR cabinet is designed to allow accessibility beneath cabinet. Follow the instructions below to remove the required components to allow easier access to the sink cabinet.

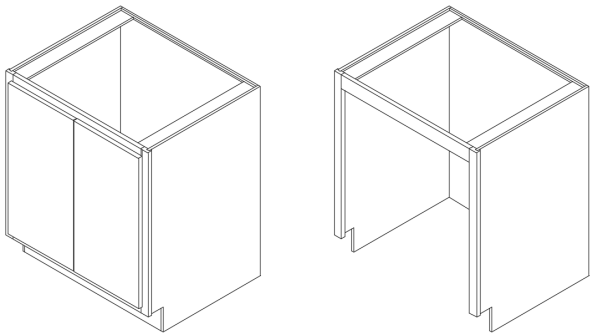

STEP 2

Remove doors from cabinet to begin modification to the cabinet. Once the doors have been removed, the cabinet bottom will also need to be removed. The cabinet bottom is not fastened to the cabinet so can be lifted out of cabinet.

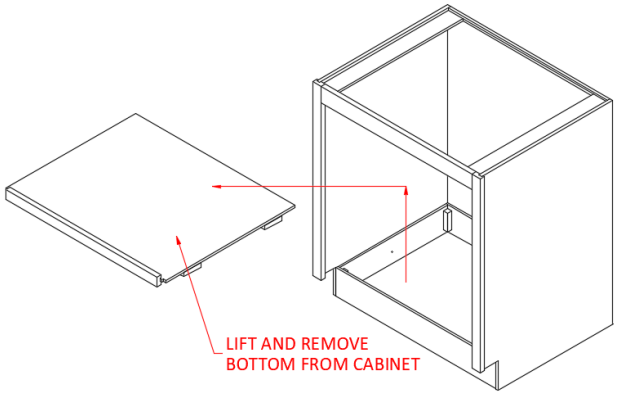

STEP 3
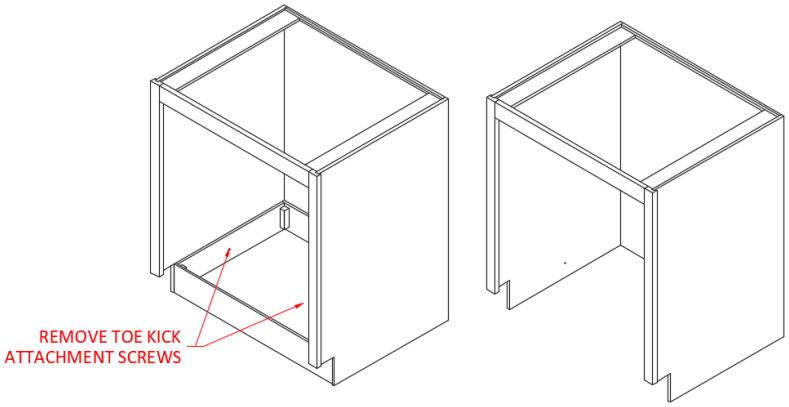
The toe kick assembly is attached to cabinet with (1) screw per side. Remove these two screws and the toe kick assembly can be slid out of cabinet. Cabinet is now modified to allow easier access.